

Dimension: 2.1" w x 1.0" h


SNO2

LAMINATE STAIR NOSE


Finishes the end of a step.

Used with floors 10-14mm in height.


Surface: Wear resistant laminate
Core Material: Moisture resistant MDF

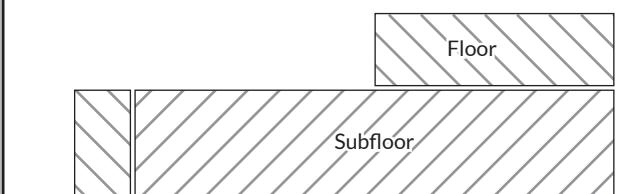


Install the flooring leaving a 1-1/4" space from the end of the step for the stair nose installation.

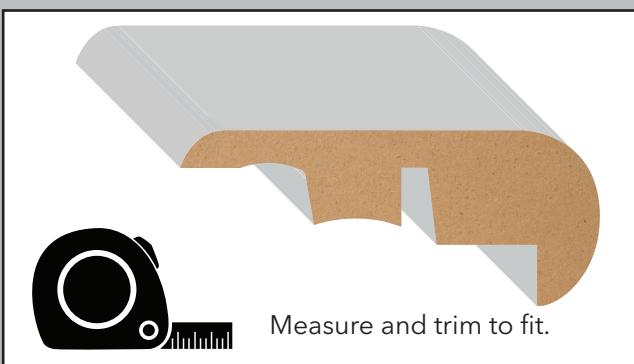

Measure and trim to fit.

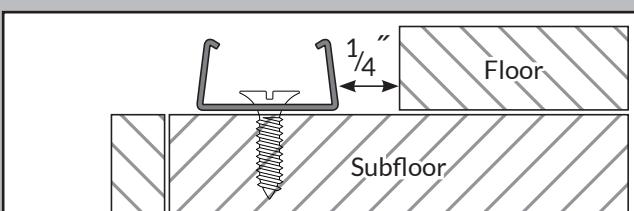

Position the track 1/4" from the floor plank and screw to the subfloor using included screws.

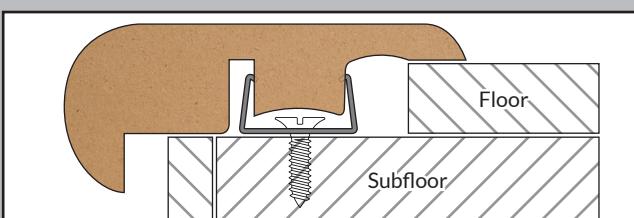

Starting at one end, press the molding into the track inching along the length of the molding. It will NOT snap in all at once. You may also use a rubber mallet.